




PackshotCreator

QuickStart

Installation Manual

PackshotCreator Package Composition

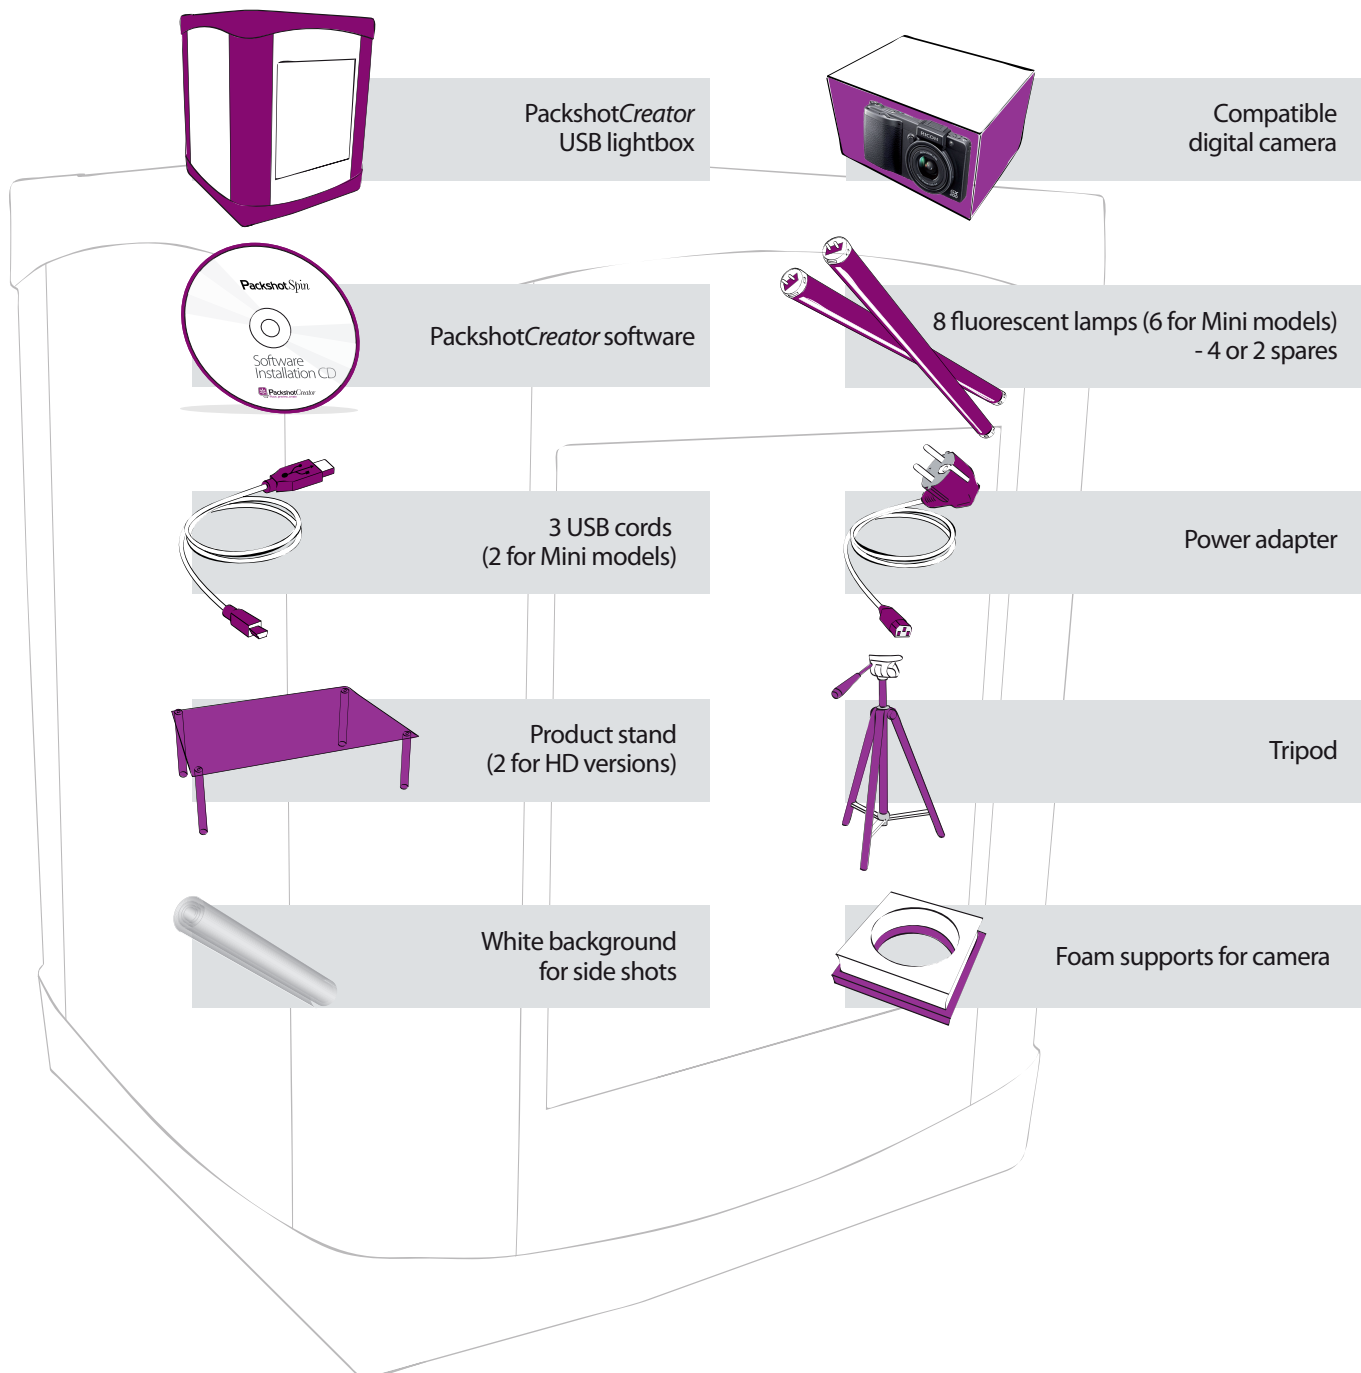

System requirements


- OS: Windows® ME / 2000 / XP, Windows 7 or Mac OS X 10.6
- (Administrator Account for 2000 and XP)
- CPU: Pentium® or equiv. (1 GHz or higher preferred)
 - RAM: Min. 1 GB (2 GB preferred)
 - VGA: Min. 1024x768, True color
 - Monitor Type: CRT or LCD monitor
 - 3 USB Ports min., CD ROM Drive
- Internet connection with active email account (optional)

PackshotCreator installation

Step A

Place the lightbox where you intend to use it.

Note: There should be a power outlet with proper grounding nearby.

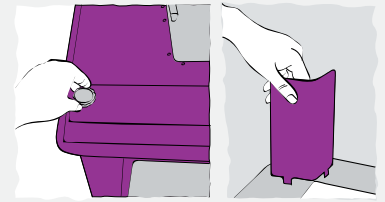


Picture 1

Picture 2

Step B

Unscrew the four screws located at the top corners of your PackshotCreator. Pull out the four diffusion plates that cover the lamp receptacles. See Picture 1 and Picture 2.

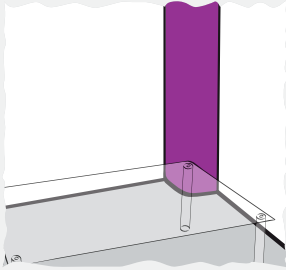


Step C

Insert the lamps into each corner of the lightbox. Gently turn the lamp until you hear a click. See Picture.

Step D


Open the camera housing located on the top of the lightbox.

Note: Both the USB cord and the power adapter are provided in the PackshotCreator package.

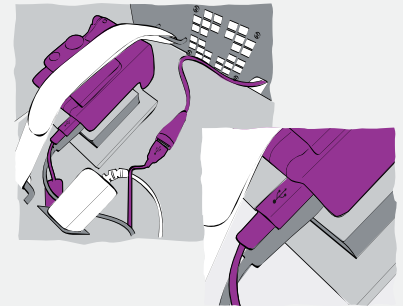

Step E

Plug the USB cable connected to the camera into the USB connector coming from the side of the camera housing.

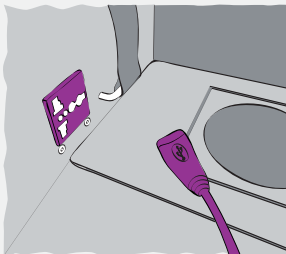


Step F

Plug one end of the power adapter into the camera and the other end into the universal power socket located inside of the camera housing. See Picture.

If you are using a PackshotCreator 360, please refer to the O3T Quick Installation Guide to install the turntable.

Step G

Plug the lightbox into a power outlet. See Picture.

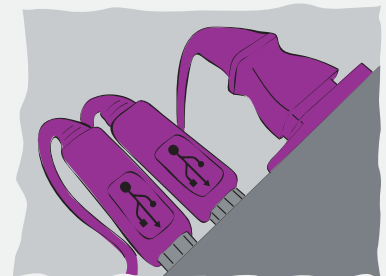


Step H

Plug the two USB cords into your computer. See Picture. Check if the switch button located at the back of the lightbox is set to the "PC Controlled" mode or "1" position.

Installing the accessories

Find the right foam support for your camera and point the lens through the opening down into the box. See Picture 1.

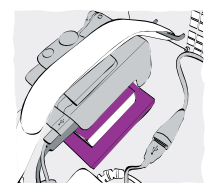


Picture 1

Assemble and place the product stand inside of the lightbox. See Picture 2.

The background provided in the package can be put and removed very easily from the back of the lightbox thanks to a plunger system. Use it for side shots and for creating animations.

Note: A white background is included in the PackshotCreator package. However you can purchase an additional black background.

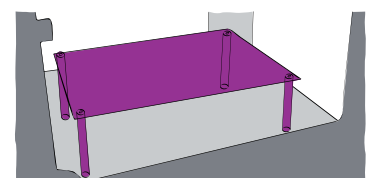

Picture 2

Installing the software

- Insert the PackshotCreator software CD-Rom into your PC. The CD-Rom will ask whether you want to launch an Installation Wizard or to install the PackshotCreator software straight away. If you are satisfied with the current installation, you can install the software directly. In this case, just follow the onscreen instructions.
- If your installation is successful, when launching the software, the lightbox and the lamps will turn on.
- A window may appear and ask you to press the power button on your camera to turn it ON. Click on the «Snap» button to take a picture and check that the camera is connected properly.
- **Very important:**
When launching the PackshotCreator software, if the message “Please choose which application should receive the image” appears, select “Cancel” to choose the PackshotCreator software as the application receiving the images.

Camera settings

You will be provided with a preconfigured camera dedicated to the PackshotCreator. However, before using your PackshotCreator solution, make sure the camera settings are set properly.

1. Set the camera to the Replaying Mode.
2. Set the «Power Down» function or the “Power Saving” mode to «Off».
3. Set the “Mute” mode to “Off”.

For more information about the software, please read the PackshotCreator User Guide included in the software.

If you wish to read tips about photography with the PackshotCreator, please refer to the Photography Tips document included in the software.

For more information please contact www.packshot-creator.com

Contacts:

PackshotCreator / Sysnext

7, rue Henri Rochefort

75017 Paris – France

T.: +33 (0)1 47 42 66 66

F.: +33 (0)1 47 42 66 67

© Sysnext 2011. All rights reserved.

This material is not to be interpreted as a guarantee of earnings and may not be copied, reproduced, modified, published, uploaded, posted or distributed in any way, without PackshotCreator's prior consent.