 


O3T turntable
QuickStart
Installation Manual

O3T turntable Package Composition

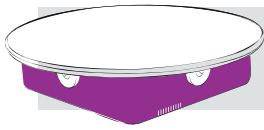

 
An 39 cm O3T turntable
with a 29 cm upper platform



A power cord



39 cm and 29 cm diameter circular
backgrounds (4 Pcs., black and white)

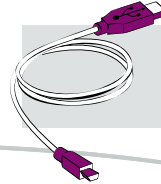

USB cables (2 Pcs.)

Note: this product must be used with a PackshotCreator with 360 option



Specifications

Turntable dimensions (ØxH):	Ø29x8.13 cm Ø39x8.13 cm
Turntable weight:	2.5 kg
Maximum object weight:	11 kg
Power requirement:	Standard 110V to 240V, 50/60Hz, 0.6A, 8W

System requirements

- OS: Windows® ME / 2000 / XP, Windows 7
(Administrator Account for 2000 and XP) or Mac OS X 10.6
- CPU: Pentium® or equiv. (1GHz or higher preferred)
 - RAM: Min. 1 GB (2 GB preferred)
 - VGA: Min. 1024x768, True color
- Monitor Type: CRT or LCD monitor
- 3 USB ports min., CD ROM Drive
- Internet connection with active email account (optional)

Getting started

Important: updating your software

The O3T turntable must be used with the PackshotCreator 360 software. If the software version you are currently using does not have a "3D" button in the upper right corner of the user interface, you must upgrade your software before continuing.




Hardware installation

Step A


Choose the rotation platform that best fits your needs. The package includes a 39 cm rotation platform covering the 29 cm platform.

- To use the 29 cm rotation platform, simply remove the screw in the center of the 39 cm platform. Do not lose the screw.
- To put the 39 cm rotation platform back, line up the two rotation platforms with the help of the 4 alignment marks and replace the screw in the center.

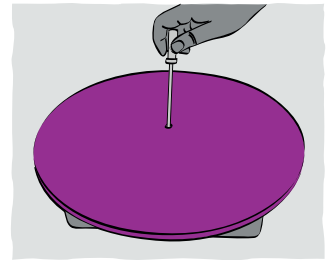

Step B

Place the O3T turntable inside of the PackshotCreator lightbox. Select a background: two black and two white backgrounds are included in the O3T package. However any background color, texture and size can be used.

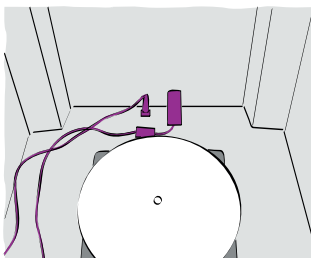


Step D

Connect the USB cable to the turntable.

- For Mini models: plug the other end of the USB cable directly into the USB port of your computer.
- For Business models: the lightbox has an integrated USB port. Connect the USB cable to this port then complete the installation by running a USB cord from the back of the lightbox to your computer.


Step C

Plug the power cord into the turntable. Plug the other end of the power cord into a power jack.

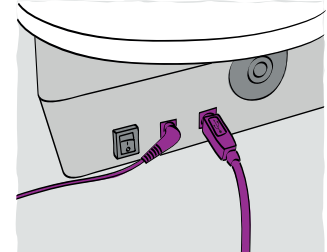

Step E

Once you have installed the turntable in the lightbox, use the side shot background to cover the cords.

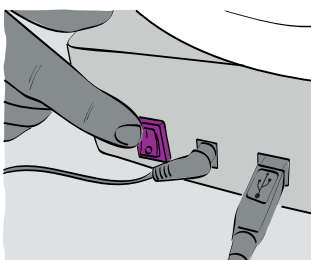

Step F

To start working with the O3T turntable, flip the switch button located on the turntable to the 'on' position.

Troubleshooting

If the message “USB Connection Error” appears:

- Check that the turntable is powered.
- Make sure all USB cords are properly connected and that the O3T turntable is properly connected to the PC.
- Check that the power switch on the turntable is set on the ‘on’ position.
- Close all windows then re-launch the software and try again.

If the problem persists, try to remove any other device connected via USB or plug the O3T turntable into a different port of your computer and try again.

Contacts:

PackshotCreator / Sysnext

7, rue Henri Rochefort

75017 Paris – France

T.: +33 (0)1 47 42 66 66

F.: +33 (0)1 47 42 66 67

© Sysnext 2011. All rights reserved.

This material is not to be interpreted as a guarantee of earnings and may not be copied, reproduced, modified, published, uploaded, posted or distributed in any way, without PackshotCreator's prior consent.